



## User's Manual

# Human Anti-MPV IgM (Anti-Monkeypox Virus IgM) ELISA Kit

REF

DEIABZ005



96T

RUO

This product is for research use only and is not intended for diagnostic use.

For illustrative purposes only. To perform the assay the instructions for use provided with the kit have to be used.

---

### Creative Diagnostics

 Address: 45-1 Ramsey Road, Shirley, NY 11967, USA

 Tel: 1-631-624-4882 (USA) 44-161-818-6441 (Europe)  Fax: 1-631-938-8221

 Email: [info@creative-diagnostics.com](mailto:info@creative-diagnostics.com)  Web: [www.creative-diagnostics.com](http://www.creative-diagnostics.com)

---

## PRODUCT INFORMATION

### Intended Use

For quantitative detection of Anti-MPV IgM in serum, plasma and other biological fluids.

### Principles of Testing

This kit was based on Capture enzyme-linked immune-sorbent assay technology. Anti-human IgM ( $\mu$  chain) antibody was precoated onto 96-well plates. The test samples and standards were added to the wells, unbound conjugates were washed away with wash buffer. And the HRP-labeled recombinant antigen was used as detection antigen. The standards, test samples and HRP conjugated detection antigen were added to the wells subsequently, and washed with wash buffer. TMB substrates were used to visualize HRP enzymatic reaction. TMB was catalyzed by HRP to produce a blue color product that changed into yellow after adding acidic stop solution. The density of yellow is proportional to the target amount of sample captured in plate. Read the O.D. absorbance at 450nm in a microplate reader, and then the concentration of target can be calculated.

### Reagents And Materials Provided

No.	Item	Specifications(96T)	Storage
E001	ELISA Microplate(Dismountable)	8×12	2-8°C/-20°C
E002	Standard	500ul	2-8°C
E039	Sample/Standard Dilution Buffer	20ml	2-8°C
E003	HRP-labeled recombinant antigen (Concentrated)	60ul	2-8°C(Avoid Direct Light)
E040	Antigen Dilution Buffer	10ml	2-8°C
E024	TMB Substrate	10ml	2-8°C(Avoid Direct Light)
E026	Stop Solution	10ml	2-8°C
E038	Wash Buffer(25X)	30ml	2-8°C
E006	Plate Sealer	5pieces	
E007	Product Description	1copy	

### Materials Required But Not Supplied

1. Microplate reader (wavelength:450nm)
2. 37°C incubator
3. Automated plate washer
4. Precision single and multi-channel pipette and disposable tips
5. Clean tubes and Eppendorf tubes

6. Deionized or distilled water

## Storage

2-8°C for 6 months

## Specimen Collection And Preparation

**1. Serum:** Place whole blood sample at room temperature for 2 hours or put it at 2-8°C overnight and centrifugation for 20 minutes at approximately 1000×g, Collect the supernatant and carry out the assay immediately. Blood collection tubes should be disposable, non-pyrogenic, and non-endotoxin.

**2. Plasma:** Collect plasma using EDTA-Na<sub>2</sub> or heparin as an anticoagulant. Centrifuge samples for 15 minutes at 1000×g at 2-8°C within 30 minutes of collection. Collect the supernatant and carry out the assay immediately. Avoid hemolysis, high cholesterol samples.

**3. Other Biological Fluids:** Centrifuge samples for 20 minutes at 1000×g at 2-8°C. Collect supernatant and carry out the assay immediately.

**Note: Samples to be used within 5 days can be stored at 2-8°C, besides that, samples must be stored at -20°C (assay ≤1 month) or -80°C (assay ≤2 months) to avoid loss of bioactivity and contamination. Avoid multiple freeze-thaw cycles. The hemolytic samples are not suitable for this assay.**

### 4. Sample Dilution

The user should estimate the concentration of target protein in the test sample, and select a proper dilution factor to make the diluted target protein concentration fall in the optimal detection range of the kit. Dilute the sample with the provided dilution buffer, and several trials may be necessary. The test sample must be well mixed with the dilution buffer. And also standard curves and sample should be making in pre-experiment. If samples with very high concentrations, dilute samples with PBS first and then dilute the samples with Sample Dilution.

**The matrix components in the sample will affect the test results, so it need to be diluted at least 1/100 with Sample Dilution Buffer before testing!**

## Reagent Preparation

Bring all reagents and samples to room temperature for 20 minutes before use.

### 1. Wash Buffer:


If crystals have formed in the concentrate, you can warm it with 40°C water bath (Heating temperature should not exceed 50°C) and mix it gently until the crystals have completely been dissolved. The solution should be cooled to room temperature before use.

Dilute 30ml Concentrated Wash Buffer to 750ml Wash Buffer with deionized or distilled water. Put unused solution back at 2-8°C.

### 2. Standards:

Label 7 EP tubes with 1/2, 1/4, 1/8, 1/16, 1/32, 1/64 and blank respectively. Add 0.3ml of the Sample Dilution Buffer into each tube. Add 0.3ml of the Standard solution (100ng/ml, labeled as zero tube) into 1<sup>st</sup> tube and

mix them thoroughly. Transfer 0.3ml from 1<sup>st</sup> tube to 2<sup>nd</sup> tube and mix them thoroughly. Transfer 0.3ml from 2<sup>nd</sup> tube to 3<sup>rd</sup> tube and mix them thoroughly, and so on. Sample Dilution Buffer was used for the blank control. **Note: It is best to use Standard Solutions within 15 minutes.**

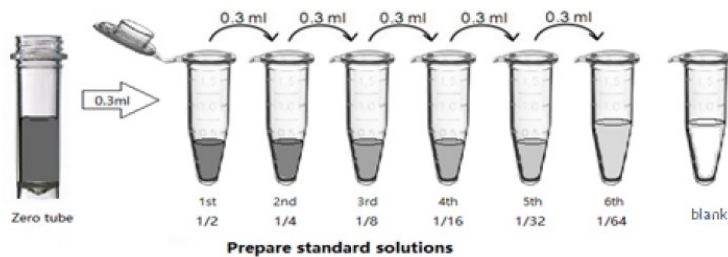

### 3. Preparation of HRP-labeled recombinant antigen Working Solution:

Prepare it within 30 minutes before experiment.

- Calculate required total volume of the working solution:  $50\mu\text{l/well} \times \text{quantity of wells}$ . (Allow 55-60 $\mu\text{l}$  more than the total volume.)
- Dilute the HRP- recombinant antigen with Antigen Dilution Buffer at 1:100 and mix them thoroughly. (i.e. Add 1 $\mu\text{l}$  HRP recombinant antigen into 99 $\mu\text{l}$  Antigen Dilution Buffer.)

## Assay Procedure

### Washing Notes

- Manual:** Discard the solution in the plate without touching the side walls. Clap the plate on absorbent filter papers or other absorbent material. Fill each well completely with 350 $\mu\text{l}$  wash buffer and soak for 1 to 2 minutes, then aspirate contents from the plate, and clap the plate on absorbent filter papers or other absorbent material.
- Automatic:** Aspirate all wells, and then wash plate with 350 $\mu\text{l}$  wash buffer. After the final wash, invert plate, and clap the plate on absorbent filter papers or other absorbent material. It is recommended that the washer shall be set for soaking 1 minute. **(Note: set the height of the needles; be sure the fluid can be sipped up completely)**

### Procedure

When diluting samples and reagents, they must be mixed completely and evenly. Before adding TMB into wells, equilibrate TMB Substrate for 30 minutes at 37°C. It is recommended to plot a standard curve for each test.

- Set standard, test samples (diluted at least 1/100 with Sample Dilution Buffer),** control (blank) wells on the pre-coated plate respectively, and then, record their positions. It is recommended to measure each standard and sample in duplicate.
- Prepare Standards:** Aliquot 50 $\mu\text{l}$  of zero tube, 1<sup>st</sup> tube, 2<sup>nd</sup> tube, 3<sup>rd</sup> tube, 4<sup>th</sup> tube, 5<sup>th</sup> tube, 6<sup>th</sup> tube and Sample Dilution Buffer (blank) into the standard wells.
- Add Samples:** Add 50 $\mu\text{l}$  of properly diluted sample into test sample wells.
- Incubate:** Seal the plate with a cover and incubate at 37°C for 30 minutes.
- Wash:** Remove the cover and discard the plate content, and wash plate 3 times with Wash Buffer. Do NOT let the wells dry completely at any time.

**6. HRP-labeled recombinant antigen:** Add 50µl HRP-labeled antigen working solution into above wells (standard, test sample and blank wells). Add the solution at the bottom of each well without touching the sidewall, cover the plate and incubate at 37°C for 30 minutes.

**7. Wash:** Remove the cover, and wash plate 5 times with Wash Buffer, and let the Wash Buffer stay in the wells for 1-2 minutes each time.

**8. TMB Substrate:** Add 50µl TMB Substrate into each well, cover the plate and incubate at 37°C in dark within 10-15 minutes. (**Note: The reaction time can be shortened or extended according to the actual color change, but not more than 30 minutes. You can terminate the reaction when apparent gradient appeared in standard wells.**)

**9. Stop:** Add 50µl Stop Solution into each well. The color will turn yellow immediately. The adding order of Stop Solution should be as the same as the TMB Substrate Solution.

**10. OD Measurement:** Read the O.D. absorbance at 450nm in Microplate Reader immediately after adding the stop solution.

**Note:** If the samples measured were diluted, multiply the dilution factor to the concentrations from interpolation to obtain the concentration before dilution.


## Calculation

Regarding calculation, (the relative O.D.450) = (the O.D.450 of each well) – (the O.D.450 of blank well). The standard curve can be plotted as the relative O.D.450 of each standard solution (Y) vs. the respective concentration of the standard solution (X). The target concentration of the samples can be interpolated from the standard curve. It is recommended to use some professional software to do this calculation

## Typical Standard Curve

Results of a typical standard operation of a Anti-MPV IgM ELISA Kit are listed below. This standard curve was generated at our lab for demonstration purpose only. Users shall obtain standard curve as per experiment by themselves. (N/A=not applicable)

STD.(ng/ml)	OD-1	OD-2	Average	Corrected
0	0.096	0.098	0.097	0.000
1.562	0.172	0.176	0.174	0.077
3.125	0.234	0.24	0.237	0.14
6.25	0.368	0.378	0.373	0.276
12.5	0.626	0.644	0.635	0.538
25	1.123	1.155	1.139	1.042
50	1.827	1.879	1.853	1.756
100	2.835	2.917	2.876	2.779

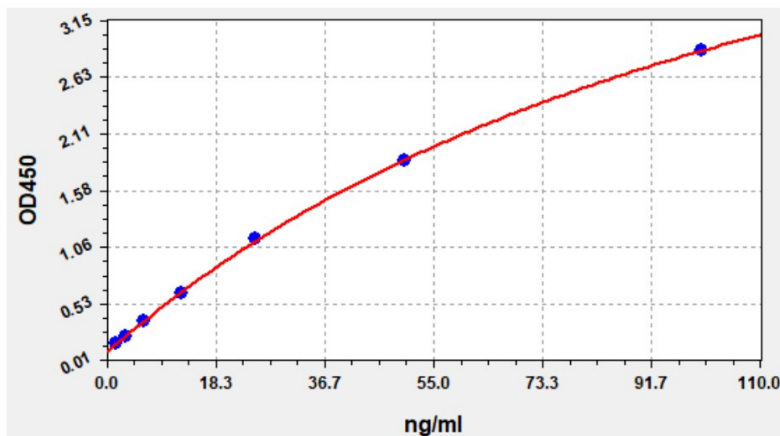

## Performance Characteristics

The stability of ELISA kit is determined by the loss rate of activity. The loss rate of this kit is less than 10% within the expiration date under appropriate storage condition.

Standard(n=5)	37°C for 1 month	2-8°C for 6 months
Average (%)	80	95-100

To minimize extra influence on performance, operation procedures and lab conditions, especially room temperature, air humidity, incubator temperature should be strictly controlled. It is strongly suggested that the same operator performs the whole assay from the beginning to the end.

## Precision

Intra-Assay: CV<8%

Inter-Assay: CV<10%

## Detection Range

1.563-100ng/ml

## Sensitivity

0.938ng/ml

## Specificity

This assay has high sensitivity and excellent specificity for detection of Anti-MPV IgM. No significant cross-reactivity or interference between Anti-MPV IgM and analogues was observed.

**Note: Limited by current skills and knowledge, it is difficult for us to complete the cross-reactivity detection between Anti-MPV IgM and all the analogues, therefore, cross reaction may still exist.**

## Linearity

The linearity of the kit was assayed by testing samples spiked with appropriate concentration of Anti-MPV IgM and their serial dilutions. The results were demonstrated by percentage of calculated concentration to the expectation.

Sample	1:2	1:4	1:8
Serum(n=5)	87-102%	85-101%	86-95%
EDTA Plasma(n=5)	83-100%	84-97%	90-97%
Heparin Plasma(n=5)	80-99%	80-99%	82-96%

## Recovery

Matrices listed below were spiked with certain level of Anti-MPV IgM and the recovery rates were calculated by comparing the measured value to the expected amount of Anti-MPV IgM in samples.

Matrix	Recovery Range (%)	Average (%)
Serum(n=5)	92-98	96
EDTA Plasma(n=5)	91-97	95
Heparin Plasma(n=5)	90-102	96

## Precautions

1. To inspect the validity of experiment operation and the appropriateness of sample dilution proportion, pilot experiment using standards and a small number of samples is recommended.
2. After opening and before using, keep plate dry.
3. Before using the kit, spin tubes and bring down all components to the bottom of tubes.
4. Storage TMB reagents avoid light.
5. Washing process is very important, not fully wash easily cause a false positive and high background.
6. Duplicate well assay is recommended for both standard and sample testing.
7. Don't let microplate dry at the assay, for dry plate will inactivate active components on plate.
8. Don't reuse tips and tubes to avoid cross contamination.
9. Avoid using the reagents from different batches together.